


5000U How to replace print head cables


1. There are two print head cables connection between print head and head board.

Please mark numbers on the cables before disconnecting.

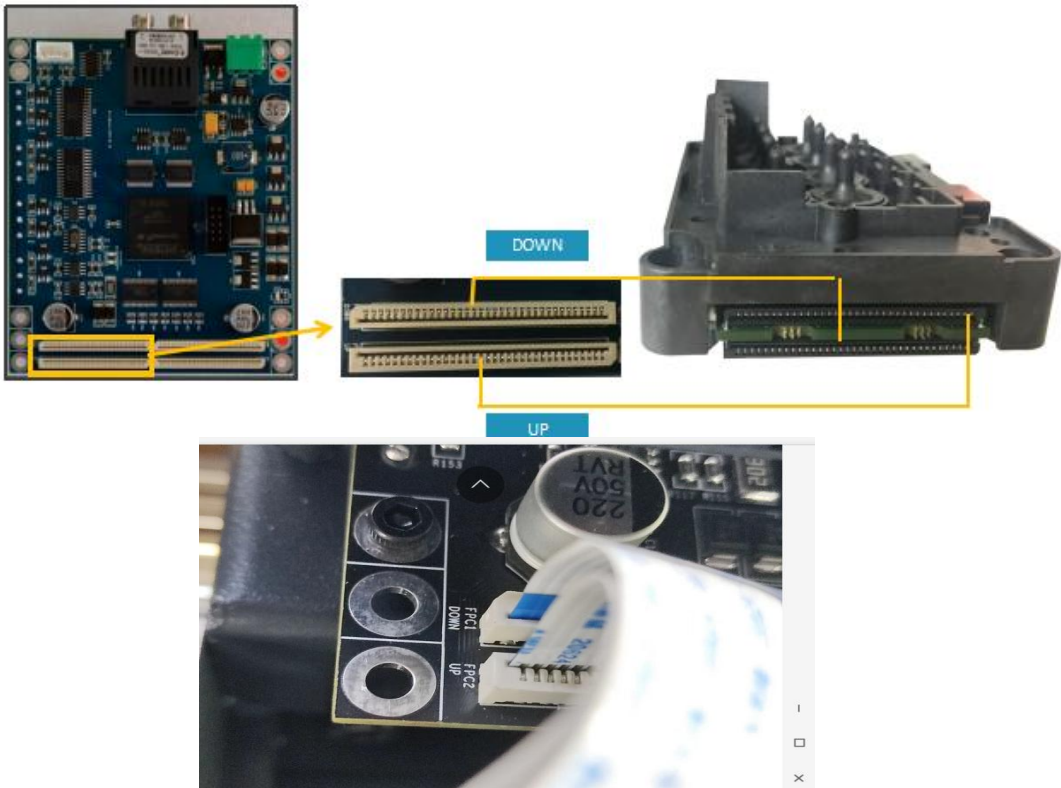

2.After power off printer, move print head to middle position.

There are four screws fixed print head.

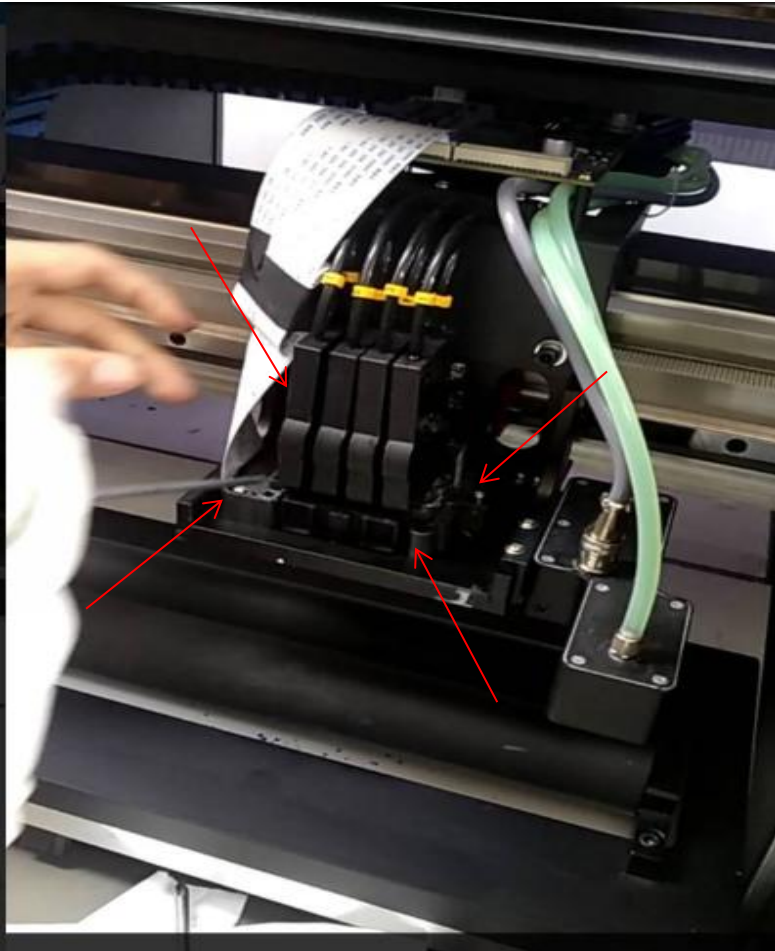


5000U How to replace print head cables

3. After unscrew four screws, next disconnect two print head cables from print head. And disconnect another end from head board.

Notice:

Please make sure the silver pins of print head cables are not dirty with ink as below.

The print head ports should not be dirty with ink as below.

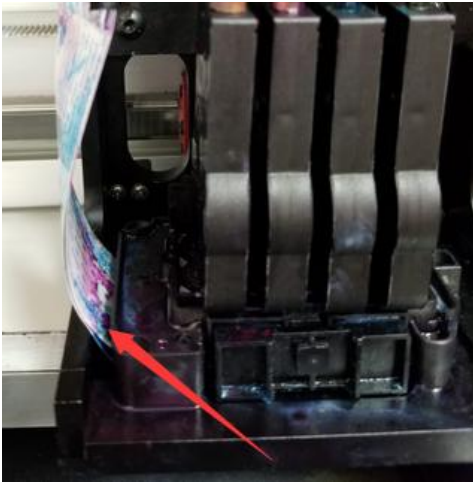

Print head ports



5000U How to replace print head cables

4. Replace new print head cables and fix screws.

